



Universal Magic Corner


Step (1)
 Place Bottom Base As Given
 Dimensions.

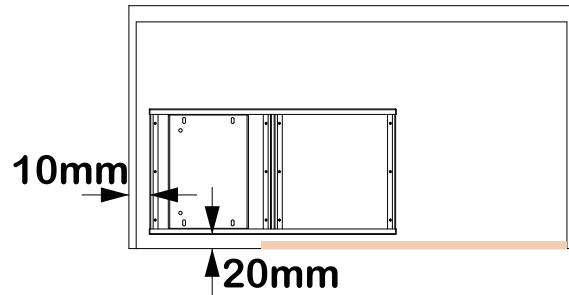


Step (2)
 Fix Sliding Base.

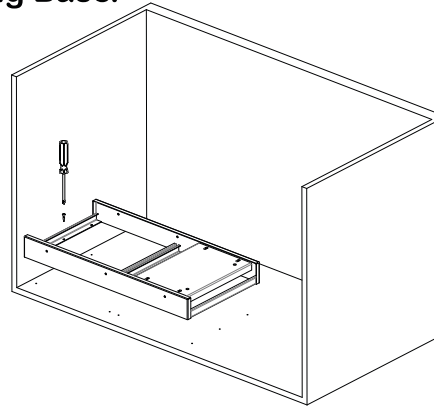


Step (3)
 Place Frame on Bottom Base And
 Fix With Bolt

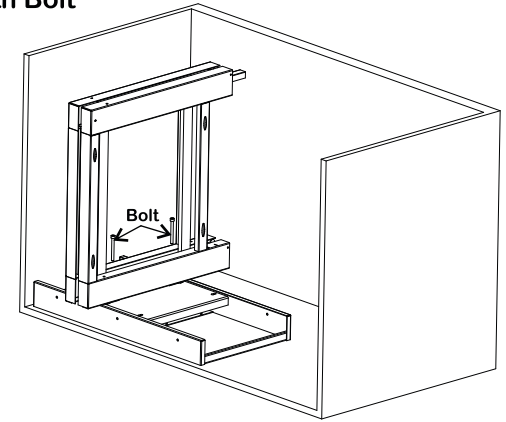

Step (4)
 Fix Handle As Shown.

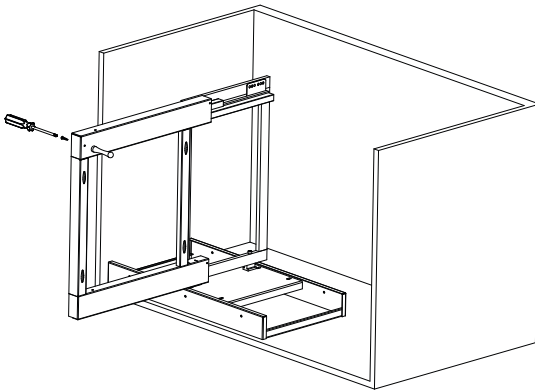

Step (5)
 Hang Baskets
 With Hook

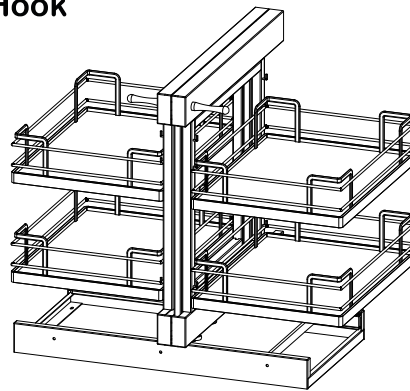

Carcass Dimension

Cabinet Width (A)	1050-1100mm
Cabinet Depth (B)	560Min.
Height (C)	600-700mm
Door Width (D)	440-490mm

