

Side Mount BPO

Side Mount BPO
Installation
YouTube



Assembly Instruction

1 Component List:


A 1 set	B 1 pcs	C 2 pcs	D 2 pcs
E 8 pcs	F 4 pcs	G 4 pcs	H 4 pcs
M4X25	M4X16	M6X7	M4X6

2 Specification & applicable cabinet width:

specification (W*D*H) mm	applicable cabinet width mm
235x483x580mm	300mm
185x483x580mm	250mm
135x483x580mm	200mm


3 Assembly steps:

- (2) drill screw holes following below size;
- (3) fix slides onto the side board with screws H

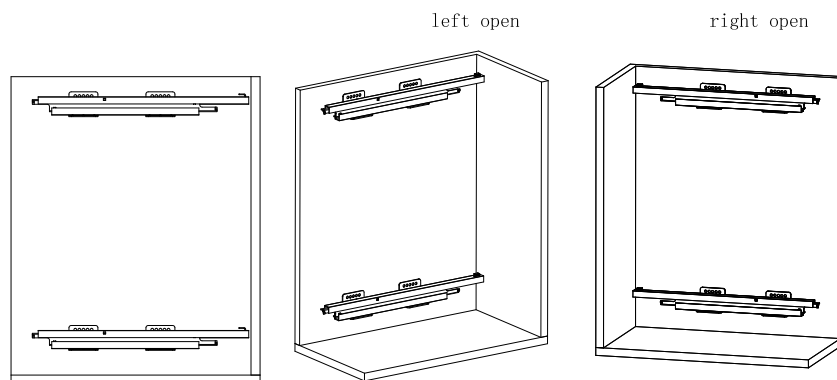


(unit:mm) bottom line


- (4) fix the frame onto slide, make it run smoothly

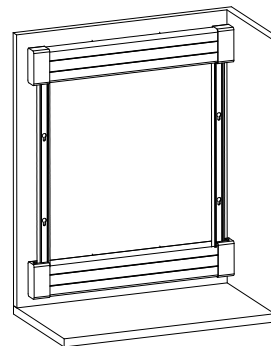


- (5) fix part G onto the frame

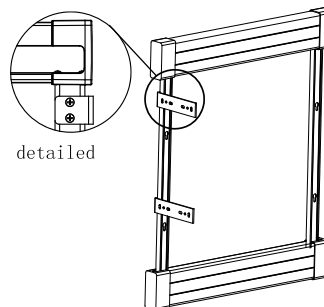


- (6) Drill the screw holes following below size

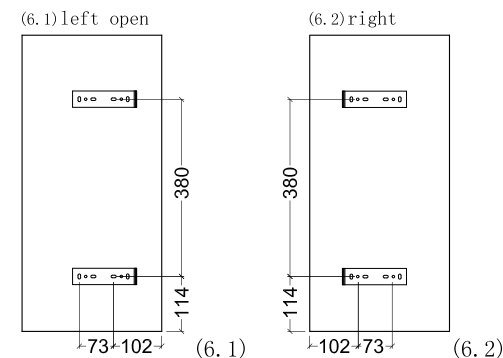

- (7) attach product to cabinet door

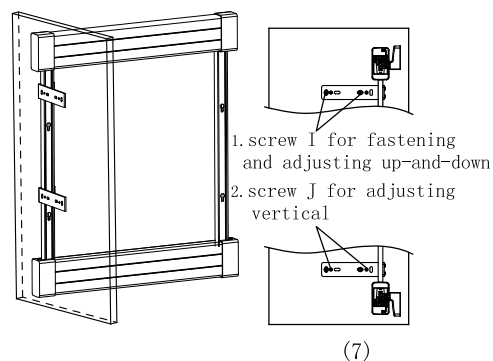

- (8) put on baskets, and plastic cover for screws

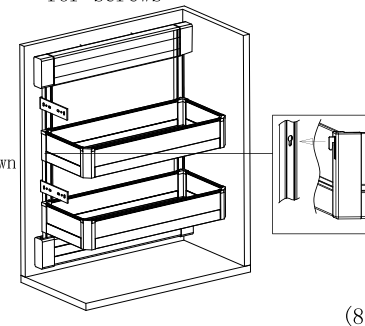

(8)

5. 10. 0117